LIFETIME Limited WARRANTY

Jandon warrants this product to be leak and drip-free during normal household use for as long as it is owned by the original consumer purchaser.

Should a malfunction occur within the time covered by this warranty, replacement parts may be obtained from the place of purchase or from Jandon's Customer Service

Jandon will, at Jandon's discretion, provide replacement parts for installation by consumer for any parts that prove defective under normal usage and service with new,

This warranty shall not apply to goods which have been subject to accidents,

Our responsibility under this warranty is limited only to replacement of parts and

This warranty covers the original consumer purchaser only and does not include



Model:8220 . 8211 Series

Chrome, Brushed Nickel, Oil Rubbed Bronze








Thank you for purchasing this **INDON** product. By following the care instructions in this booklet you will enjoy this quality item for many years to come.


You can appreciate the fine craftsmanship in your own home with Brookfield fixtures in contemporary designs, meticulously engineered with water and energy-saving features.

Spout & Handle Installation Instructions

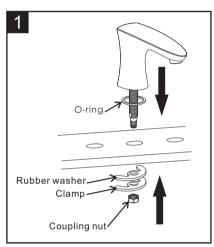

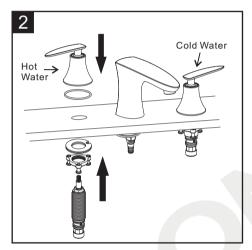


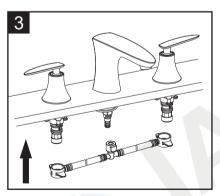


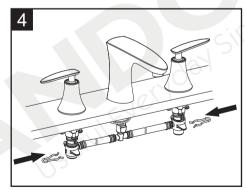


- 1 Position spout on deck, from underside of deck, assemble "rubber washer & clamp", tighten with coupling nut.
- 2 Position handle on deck, from underside of deck, assemble "rubber washer & clamp", tighten with nut and screw.
- 3 Insert flexible hoses into the faucet base as shown.
- 4 Tighten the handle with the clamp spring.

Pop-up & Hose Installation Instructions




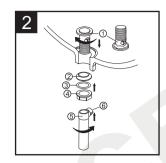


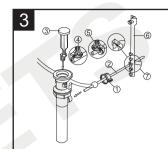

- 1 Unscrew pop-up body ① and tailpiece ②. Remove stopper ③. Unscrew lock nut ④ all the way down. Push transparent plastic washer ⑤ and rubber gasket ⑥ down.
- 2 Apply plumber's putty to the underside of pop-up body ①, insert pop-up body ① to drain hole. Under sink, put back rubber gasket ②, transparent plastic washer ③in order, hand tighten lock nut ④. Do not overtighten. Thread the tailpiece ⑤ to the bottom of pop-up body ①. Hand tighten. Pivot hole ⑥ must face the back of the sink. Tighten lock nut ④. Do not overtighten. Clean excess putty.
- Remove pivot nut ①. Install horizontal rod ② and stopper ③ as removable ④ or non-removable ⑤. Hand tighten pivot nut ①. Attach horizontal rod ② to strap ⑥ using clip ⑦.
- 4 Insert lift rod ① through faucet and into strap ②. Tighten screw ③.
- Connect the flexible hoses (not included) to the water valve by hand. Don't use tools to avoid damaging flexible hoses.

 Connect the cold flexible braided connector(not included) to the cold stop valve(not included). Tighten connectors by hand, and retighten 1/4 turn using the appropriate tool. Be careful not to damage the braided connector. Repeat the step for the hot water flexible braided connector(not included) with the hot stop valve (not included).
- ★ Run water through faucet while checking for leaks at all connections.

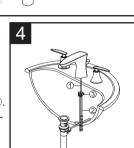

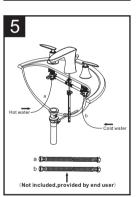

Care Instructions

To clean, wipe gently with a soft, damp cloth, then wipe dry. **IDANDON** finished are very durable. However to ensure long lasting luster, harsh abrasives or polished should be avoided.



Please Conserve Water!